

Environment Monitoring Sensor

EM300 Series

User Guide

Applicability

This guide is applicable to EM300 series sensors shown as follows, except where otherwise indicated.

| Model | Description |
|-----------|---------------------------------|
| EM300-TH | Temperature and Humidity Sensor |
| EM300-MCS | Magnet Switch Sensor |
| EM300-SLD | Spot Leak Detection Sensor |
| EM300-ZLD | Zone Leak Detection Sensor |

Safety Precautions

Milesight will not shoulder responsibility for any loss or damage resulting from not following the instructions of this operating guide.

- ❖ The device must not be disassembled or remodeled in any way.
- ❖ The device is not intended to be used as a reference sensor, and Milesight will not should responsibility for any damage which may result from inaccurate readings.
- ❖ Do not place the device close to objects with naked flames.
- ❖ Do not place the device where the temperature is below/above the operating range.
- ❖ Make sure electronic components do not drop out of the enclosure while opening.
- ❖ When installing the battery, please install it accurately, and do not install the reverse or wrong model.
- ❖ Make sure both batteries are newest when install, or battery life will be reduced.
- ❖ The device must never be subjected to shocks or impacts.


Declaration of Conformity

EM300 series is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.



Copyright © 2011-2021 Milesight. All rights reserved.

All information in this guide is protected by copyright law. Whereby, no organization or individual shall copy or reproduce the whole or part of this user guide by any means without written authorization from Xiamen Milesight IoT Co., Ltd.

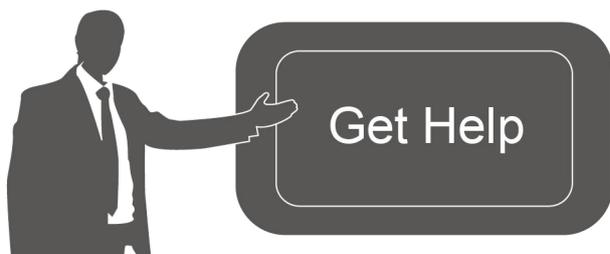

For assistance, please contact

Milesight technical support:

Email: iot.support@milesight.com

Tel: 86-592-5085280

Fax: 86-592-5023065

Address: 4/F, No.63-2 Wanghai Road,
2nd Software Park, Xiamen, China

Revision History

| Date | Doc Version | Description |
|---------------|-------------|--|
| Oct. 14, 2020 | V 1.0 | Initial version |
| Oct. 21, 2020 | V 1.1 | Model name change and pictures replace |
| Nov. 19, 2020 | V 2.0 | Layout replace |
| Mar. 4, 2021 | V 2.1 | Layout update |
| July 5, 2021 | V 2.2 | Delete USB Type-C description |

Contents

| | |
|---|----|
| 1. Product Introduction..... | 5 |
| 1.1 Overview..... | 5 |
| 1.2 Features..... | 5 |
| 2. Hardware Introduction..... | 5 |
| 2.1 Packing List..... | 5 |
| 2.2 Hardware Overview..... | 6 |
| 2.3 Dimensions(mm)..... | 6 |
| 2.4 Power Button..... | 6 |
| 3. Operation Guide..... | 7 |
| 3.1 NFC Configuration..... | 7 |
| 3.2 LoRaWAN Settings..... | 8 |
| 3.3 Basic Settings..... | 11 |
| 3.4 Advanced Settings..... | 11 |
| 3.4.1 Calibration Settings..... | 11 |
| 3.4.2 Threshold Settings..... | 11 |
| 3.5 Maintenance..... | 12 |
| 3.5.1 Upgrade..... | 12 |
| 3.5.2 Backup..... | 12 |
| 3.5.3 Reset to Factory Default..... | 13 |
| 4. Installation..... | 14 |
| 5. Milesight IoT Cloud Management..... | 15 |
| 5.1 Add a Milesight Gateway..... | 15 |
| 5.2 Add EM300 to Milesight IoT Cloud..... | 16 |
| 6. Device Payload..... | 17 |
| 6.1 Basic Information..... | 17 |
| 6.2 Sensor Data..... | 18 |
| 6.3 Downlink Commands..... | 19 |

1. Product Introduction

1.1 Overview

EM300 series is a sensor mainly used for outdoor environment through wireless LoRa network. EM300 device is battery powered and designed for multiple mounting ways. It is equipped with NFC (Near Field Communication) and can easily be configured by a smartphone.

Sensor data are transmitted in real-time using standard LoRaWAN[®] protocol. LoRaWAN[®] enables encrypted radio transmissions over long distance while consuming very little power. The user can obtain sensor data and view the trend of data change through Milesight IoT Cloud or through the user's own Network Server.

1.2 Features

- Up to 11 km communication range
- Easy configuration via NFC
- Standard LoRaWAN[®] support
- Milesight IoT Cloud compliant
- Low power consumption with 4000mAh replaceable battery

2. Hardware Introduction

2.1 Packing List



1 × EM300 Sensor



Wall Mounting
Kits



1 ×
Warranty Card



1 ×
Quick Guide



Double Sided Tape(for
SLD or MCS sensor)



Mounting Screws (for
SLD or MCS sensor)




1 × NFC
Reader(Optional)




If any of the above items is missing or damaged, please contact your sales representative.

2.2 Hardware Overview

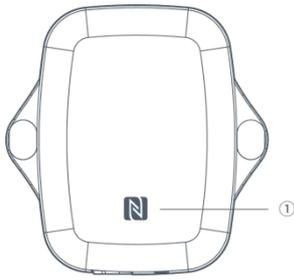

Front View:

① NFC Area

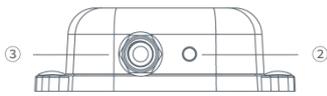


Bottom View:


② Vent

③ Waterproof Connectors

(For water leakage and magnet switch sensor)

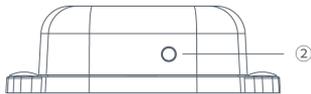

2.3 Dimensions(mm)

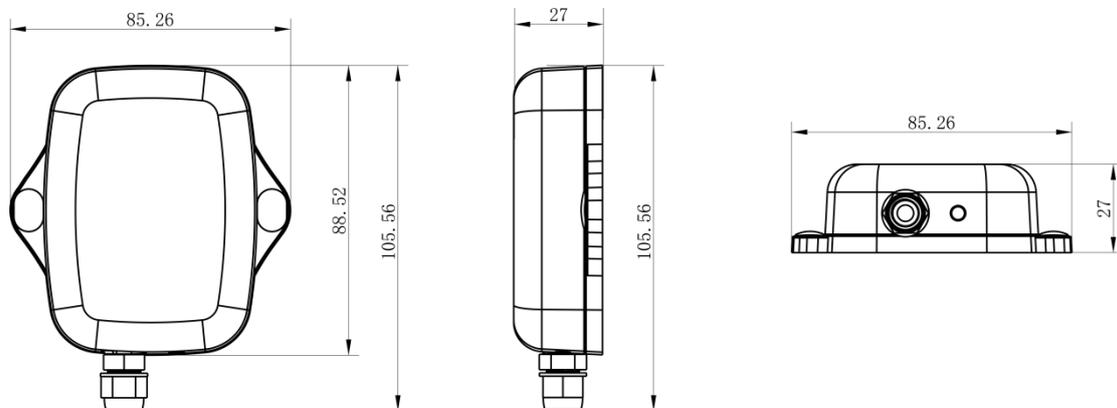

2.4 Power Button

Note: The LED indicator and power button are inside the device. Switch on/off and reset can also be configured via NFC.

| Function | Action | LED Indication |
|----------|---|----------------|
| Turn On | Press and hold the button for more than 3 seconds. | Off → On |
| Turn Off | Press and hold the button for more than 3 seconds. | On → Off |
| Reset | Press and hold the button for more than 10 seconds. | Blink 3 times. |


| | | |
|------------------------|---------------------------------|---------------------------|
| Check On/Off Status | Quickly press the power button. | Light On: Device is on. |
| | | Light Off: Device is off. |

3. Operation Guide

3.1 NFC Configuration

EM300 series can be configured via NFC.

1. Download and install "Milesight ToolBox" App from Google Play or Apple Store.
2. Enable NFC on the smartphone and open "Milesight ToolBox" App.
3. Attach the smartphone with NFC area to the device to read basic information.

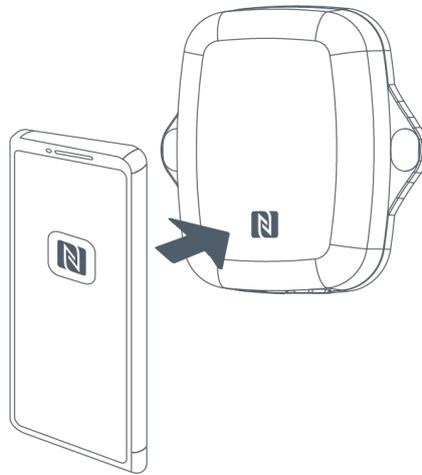


4. Basic information and settings of devices will be shown on ToolBox if it's recognized successfully. You can turn on/off the device by tapping the button on the Device Status. In order to protect the security of devices, password validation is required when configuring via unused phone . Default password is **123456**.

| Status | Setting | Reset |
|------------------|------------------|--------------------------|
| SN | 6136A39116331007 | |
| Model | EM300-TH-915M | |
| Device EUI | 24e124136a391163 | |
| Firmware Version | V1.15 | |
| Hardware Version | V2.1 | |
| Device Status | Off | <input type="checkbox"/> |

5. Tap "Read" button to check current status and sensor data of device.
6. Tap "Write" button to write all your settings to the device.

Note:

- 1) Ensure the location of smartphone NFC area and it's recommended to take off phone case.
- 2) If the smartphone fails to read/write configurations via NFC, keep the phone away and back to try again.
- 3) EM300 series can also be configured by dedicated NFC reader provided by Milesight IoT or you can configure it via TTL interface inside the device.

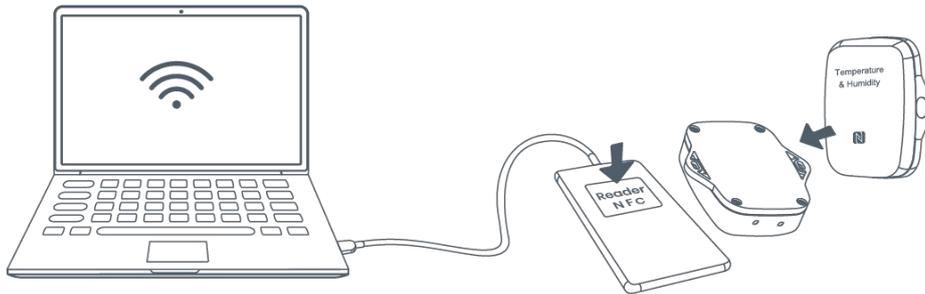

3.2 LoRaWAN Settings

LoRaWAN settings is used for configuring the transmission parameters in LoRaWAN® network.

Basic LoRaWAN Settings:

Go to **Device->Setting->LoRaWAN Settings** of ToolBox App to configure join type, App EUI, App Key and other information. You can also keep all settings by default.

| | |
|--------------------------------|---|
| Device EUI | <input type="text" value="24E124127A270222"/> |
| App EUI | <input type="text" value="24E124C0002A0001"/> |
| Application Port | <input type="text" value="85"/> |
| Join Type | <input type="text" value="OTAA"/> |
| LoRaWAN Version | <input type="text" value="V1.1.0"/> |
| Application Key | <input type="text" value="*****"/> |
| Spread Factor | <input type="text" value="SF10-DR2"/> |
| Confirmed Mode | <input type="checkbox"/> |
| Rejoin Mode | <input checked="" type="checkbox"/> |
| Set the number of packets sent | <input type="text" value="32"/> packets |
| ADR Mode | <input checked="" type="checkbox"/> |

| Parameters | Description |
|-------------------------|--|
| Device EUI | Unique ID of the device which can also be found on the label. |
| App EUI | Default App EUI is 24E124C0002A0001. |
| Application Port | The port used for sending and receiving data, default port is 85. |
| Join Type | OTAA and ABP mode are available. |
| LoRaWAN Version | V1.0.2, V1.0.3, V1.1 are available. |
| Application Key | Appkey for OTAA mode, default is 5572404C696E6B4C6F52613230313823. |
| Device Address | DevAddr for ABP mode, default is the 5 th to 12 th digits of SN. |
| Network Session Key | Nwkskey for ABP mode, default is 5572404C696E6B4C6F52613230313823. |
| Application Session Key | Appskey for ABP mode, default is 5572404C696E6B4C6F52613230313823. |
| Spread Factor | If ADR is disabled, the device will send data via this spread factor. |
| Confirmed Mode | If the device does not receive ACK packet from network server, it will resend data 3 times at most. |
| Rejoin Mode | Reporting interval \leq 30 mins: device will send specific mounts of LoRaMAC packets to check connection status every 30 mins; If no reply after specific packets, the device will re-join. Reporting interval $>$ 30 mins: device will send specific mounts of LoRaMAC packets every to check connection status every reporting interval; If no reply after specific packets, the device will re-join. |
| ADR Mode | Allow network server to adjust datarate of the device. |
| Tx Power | Transmit power of device. |

Note:

- 1) Please contact sales for device EUI list if there are many units.
- 2) Please contact sales if you need random App keys before purchase.
- 3) Select OTAA mode if you use Milesight IoT cloud to manage devices.
- 4) Only OTAA mode supports rejoin mode.

LoRaWAN Frequency Settings:

Go to **Setting->LoRaWAN Settings** of ToolBox App to select supported frequency and select channels to send uplinks. Make sure the channels match the LoRaWAN[®] gateway.

Basic
Channel

Support Frequency : EU868

| <input type="checkbox"/> | Index | Frequency/MHz | Max Datarate | Min Datarate |
|-------------------------------------|-------|--|---|--|
| <input checked="" type="checkbox"/> | 0 | <input style="width: 80%;" type="text" value="868.1"/> | 5-SF7BW125 | 0-SF12BW125 |
| <input checked="" type="checkbox"/> | 1 | <input style="width: 80%;" type="text" value="868.3"/> | 5-SF7BW125 | 0-SF12BW125 |
| <input checked="" type="checkbox"/> | 2 | <input style="width: 80%;" type="text" value="868.5"/> | 5-SF7BW125 | 0-SF12BW125 |
| <input type="checkbox"/> | 3 | <input style="width: 80%;" type="text" value="0"/> | 5-SF7BW125 | 0-SF12BW125 |
| <input type="checkbox"/> | 4 | <input style="width: 80%;" type="text" value="0"/> | 5-SF7BW125 | 0-SF12BW125 |
| <input type="checkbox"/> | 5 | <input style="width: 80%;" type="text" value="0"/> | 5-SF7BW125 | 0-SF12BW125 |
| <input type="checkbox"/> | 6 | <input style="width: 80%;" type="text" value="0"/> | 5-SF7BW125 | 0-SF12BW125 |
| <input type="checkbox"/> | 7 | <input style="width: 80%;" type="text" value="0"/> | 5-SF7BW125 | 0-SF12BW125 |

If frequency is one of CN470/AU915/US915, you can enter the index of the channel that you want to enable in the input box, making them separated by commas.

Examples:

1, 40: Enabling Channel 1 and Channel 40

1-40: Enabling Channel 1 to Channel 40

1-40, 60: Enabling Channel 1 to Channel 40 and Channel 60

All: Enabling all channels

Null: Indicates that all channels are disabled

Support Frequency : AU915

Enabled Channel Index: ?

| Channel Index | Frequency/MHz | Channel Spacing/MHz | BW/kHz |
|---------------|---------------|---------------------|--------|
| 0 - 15 | 915.2 - 918.2 | 0.2 | 125 |
| 16 - 31 | 918.4 - 921.4 | 0.2 | 125 |
| 32 - 47 | 921.6 - 924.6 | 0.2 | 125 |
| 48 - 63 | 924.8 - 927.8 | 0.2 | 125 |
| 64 - 71 | 915.9 - 927.1 | 1.6 | 500 |

Note:

For -868M model, default frequency is EU868;

For -915M model, default frequency is AU915.

3.3 Basic Settings

Go to **Device->Setting->General Settings** of ToolBox App to change the reporting interval, etc.

Reporting Interval min

Temperature Unit 

Change Password

| Parameters | Description |
|--------------------|--|
| Reporting Interval | Reporting interval of transmitting data to network server.Default: 600s |
| Temperature Unit | Change the temperature unit displayed on the ToolBox. Note: 1) The temperature unit in the reporting package is fixed as °C. 2) Please modify the threshold settings if the unit is changed. |
| Change Password | Change the password for ToolBox App or software to read/write this device. |

3.4 Advanced Settings

3.4.1 Calibration Settings

ToolBox supports numerical calibration for all items. Go to **Device->Setting->Calibration Settings** of ToolBox App to type the calibration value and save, the device will add the calibration value to raw value.

Temperature Calibration

Current Raw Value 0 °C

Calibration Value °C

Final Value -1 °C

Humidity Calibration

3.4.2 Threshold Settings

EM300 series will upload the current data once instantly after the threshold is triggered.

Go to **Device->Setting->Threshold Settings** of ToolBox App to enable the threshold settings and input the threshold.

| | |
|--------------------------|-------------------------------------|
| Temperature | <input checked="" type="checkbox"/> |
| Over | <input type="text" value="0"/> °C |
| Below | <input type="text" value="0"/> °C |
| Data Collecting Interval | <input type="text" value="1"/> min |

3.5 Maintenance

3.5.1 Upgrade

1. Download firmware from Milesight website to your smartphone.
2. Open Toolbox App and click "Browse" to import firmware and upgrade the device.

Note:

- 1) Operation on ToolBox is not supported during an upgrade.
- 2) Only Android version ToolBox supports the upgrade feature.


| Status | Setting | Maintenance |
|------------------|------------------|-------------|
| SN | 6136B26167392109 | |
| Model | EM300-ZLD-915M | |
| Firmware Version | V1.1-a1 | |
| Hardware Version | V3.0 | |
| Manual Upgrade | | |

[Browse](#)


3.5.2 Backup

EM300 devices support configuration backup for easy and quick device configuration in bulk. Backup is allowed only for devices with the same model and LoRa frequency band.

1. Go to "Template" page on the App and save current settings as a template. You can also edit the template file.
2. Select one template file which saved in the smartphone and click "Write", then attach to another device to write configuration.

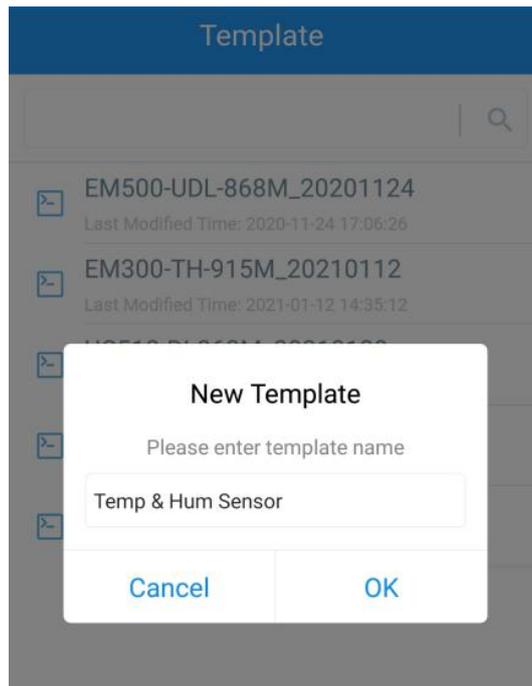

Note: Slide the template item left to edit or delete the template. Click the template to edit the configurations.

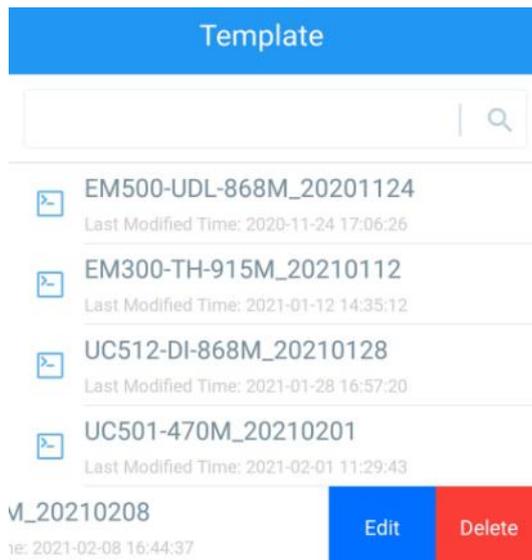

3.5.3 Reset to Factory Default

Please select one of following methods to reset device:


Via Hardware: Hold on power button (internal) for more than 10s.

Via ToolBox App: Go to "Device->Maintenance" to click "Reset", then attach smart phone with NFC area to device to complete reset.

| Status | Setting | Maintenance |
|-------------------------|------------------|-------------|
| SN | 6136B26167392109 | |
| Model | EM300-ZLD-915M | |
| Firmware Version | V1.1-a1 | |
| Hardware Version | V3.0 | |
| Manual Upgrade | | |
| Browse | | |
| Restore Factory Default | | |
| Reset | | |


4. Installation

1. Attach EM300 to the wall and mark the two holes on the wall. The connecting line of two holes must be a horizontal line.
2. Drill the holes according to the marks and screw the wall plugs into the wall.
3. Mount the EM300 to the wall via mounting screws.
4. Cover the mounting screws with screw caps.

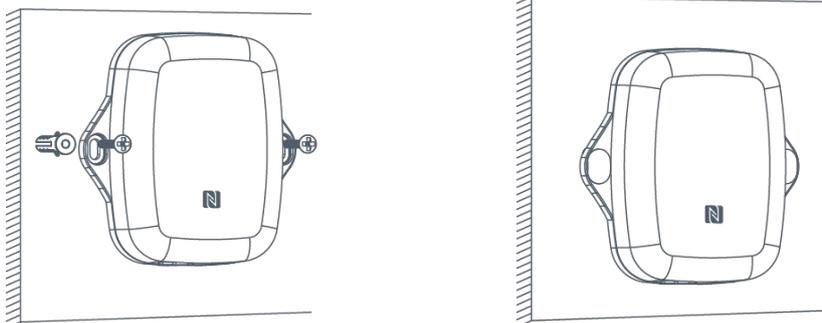

5. For leak detection sensor, install the probe/cable to the place where liquid may leak. For magnet switch sensor, install the magnet beside the door/window.

Note: For SLD sensor, please ensure the metal pins of the probe are flat on the floor; for ZLD sensor, the cable can't be twined or accumulated together. The probe or cable of water leakage sensor should be placed in an area of concern where water from a leak would likely accumulate.

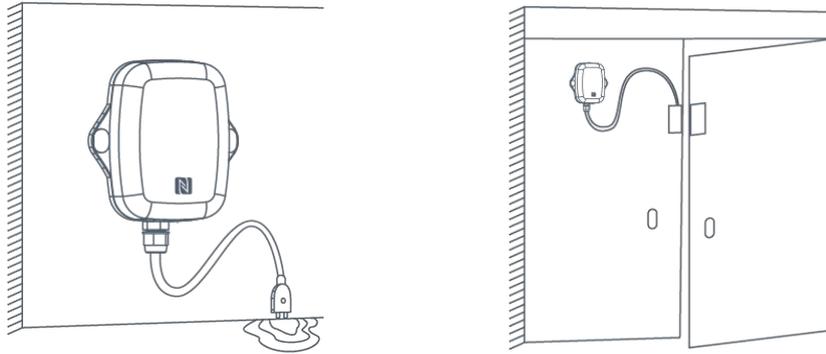

5. Milesight IoT Cloud Management


EM300 series can be managed by Milesight IoT Cloud platform. Milesight IoT cloud is a comprehensive platform that provides multiple services including device remote management and data visualization with the easiest operation procedures. Please register a Milesight IoT Cloud account before operating following steps.

5.1 Add a Milesight Gateway


Step 1: Enable gateway embedded network server and “Milesight IoT Cloud” mode in gateway web GUI.

Note: Ensure gateway has accessed the Internet.


| ID | Enable | Type | Server Address | Operation |
|----|---------|-----------|----------------|-----------|
| 0 | Enabled | Milesight | localhost | |
| | | | | |

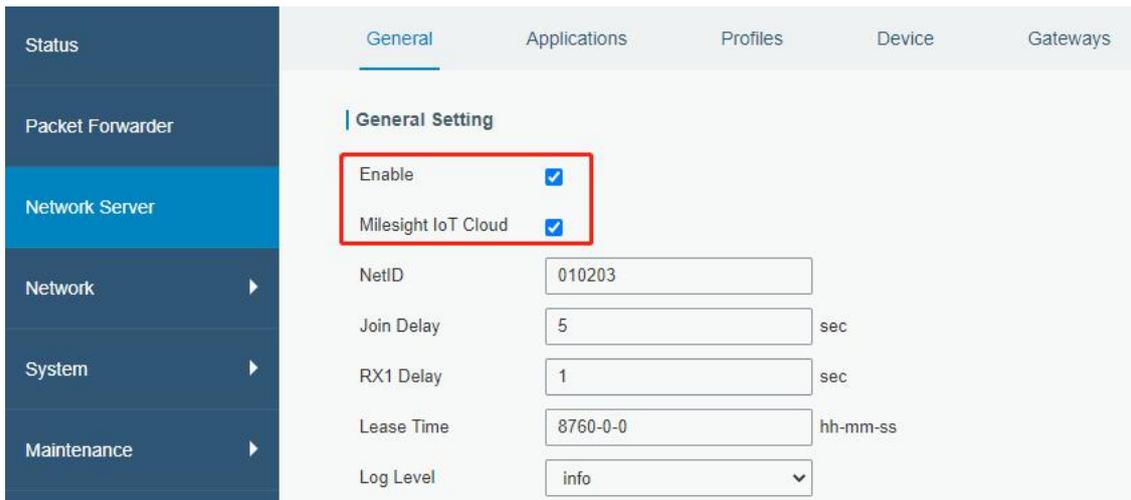

Step 2: Go to "My Devices" page and click "+New Devices" to add gateway to Milesight IoT Cloud via SN. Gateway will be added under "Gateways" menu.

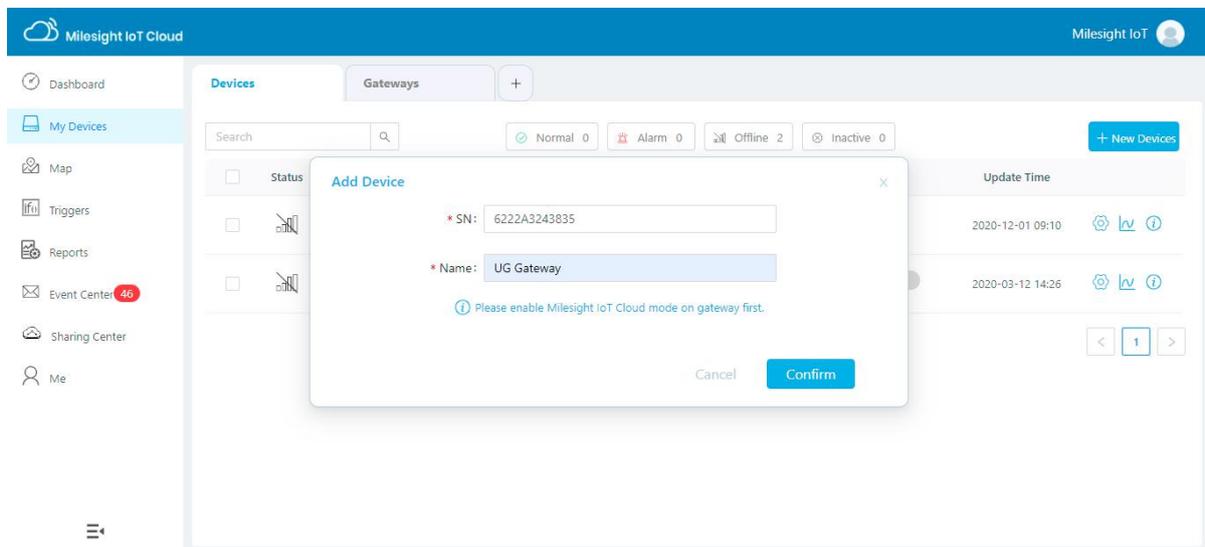

Step 3: Check if gateway is online in Milesight IoT Cloud.

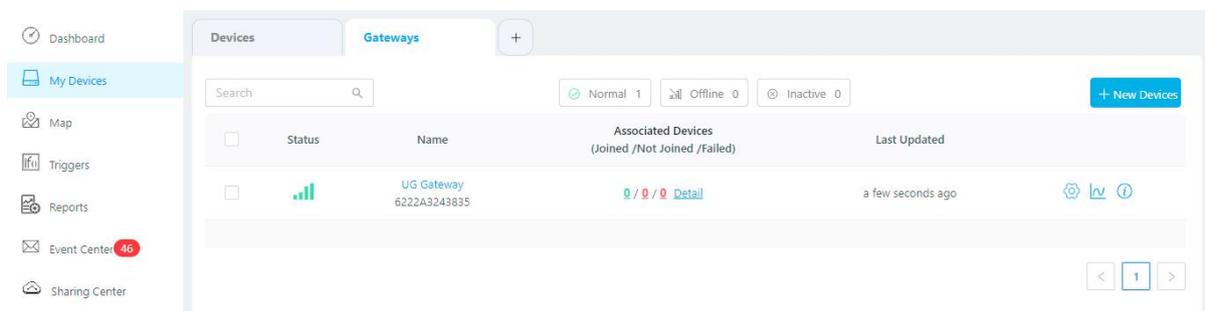

5.2 Add EM300 to Milesight IoT Cloud

Step 1: Go to "My Devices" page and click "+New Devices". Fill in the SN of device and select associated gateway.

Add Device ✕

* SN:

* Name:

* Associated Gateway:

* Device EUI:

* Application Key:

Step 2: After the device is online in Milesight IoT Cloud, you can check the data via webpage or mobile App and create dashboard for it.

6. Device Payload

All data are based on following format(HEX):

| Channel1 | Type1 | Data1 | Channel2 | Type2 | Data2 | Channel 3 | ... |
|----------|--------|---------|----------|--------|---------|-----------|-----|
| 1 Byte | 1 Byte | N Bytes | 1 Byte | 1 Byte | M Bytes | 1 Byte | ... |

For decoder examples please find files on <https://github.com/Milesight-IoT/SensorDecoders>.

6.1 Basic Information

EM300 series sensors report basic information of sensor everytime joining the network.

| Channel | Type | Data Example | Description |
|---------|-----------------------|-------------------|---------------------------|
| ff | 01(Protocol Version) | 01 | V1 |
| | 08 (Device SN) | 61 27 a2 17 41 32 | Device SN is 6127a2174132 |
| | 09 (Hardware Version) | 01 40 | V1.4 |

| | | | |
|--|----------------------|-------|---------|
| | 0a(Software Version) | 01 14 | V1.14 |
| | 0f(Device Type) | 00 | Class A |

Example:

| ff 09 01 00 ff 0a 01 02 ff 0f 00 | | | | | |
|----------------------------------|--------------------------|-----------------|---------|--------------------------|-------------|
| Channel | Type | Value | Channel | Type | Value |
| ff | 09 (Hardware version) | 0100 (V1.0) | ff | 0a (Software version) | 0102 (V1.2) |
| Channel | Type | Value | | | |
| ff | 0f (Device Type) | 00 (Class A) | | | |

6.2 Sensor Data

EM300 series sensors report sensor data according to reporting interval (10min by default). Battery level is reported every 6 hours.

| Channel | Type | Description |
|---------|--------------------------|--|
| 01 | 75(Battery Level) | UINT8, Unit: % |
| 03 | 67 (Temperature) | INT16, Unit: °C |
| 04 | 68(Humidity) | INT8, Unit: % |
| 05 | 00(Water Leakage Status) | 00=>Not water leakage 01=>Water leakage |
| 06 | 00(Magnet Status) | 00=>Magnet switch closed 01=>Magnet switch open |

Example:

| 01 75 64 03 67 10 01 04 68 71 05 00 01 | | | | | |
|--|------------------|----------------------------------|---------|---------------------|---|
| Channel | Type | Value | Channel | Type | Value |
| 01 | 75 (Battery) | 64 => 100% | 03 | 67 (Temperature) | 10 01 => 01 10 = 272 Temp=272*0.1=27.2°C |
| Channel | Type | Value | Channel | Type | Value |
| 04 | 68 (Humidity) | 71=>113 Hum=113* 0.5=56.5% | 05 | 00 | 01=>Water leakage |

6.3 Downlink Commands

EM300 series sensors support downlink commands to configure the device. Application port is 85 by default.

| Channel | Type | Data Example | Description |
|---------|----------------------------|--------------|------------------------|
| ff | 03(Set Reporting Interval) | b0 04 | b0 04 => 04 b0 = 1200s |

-END-